


## Exploded view for Pad Washer

Updated 30.06.2016

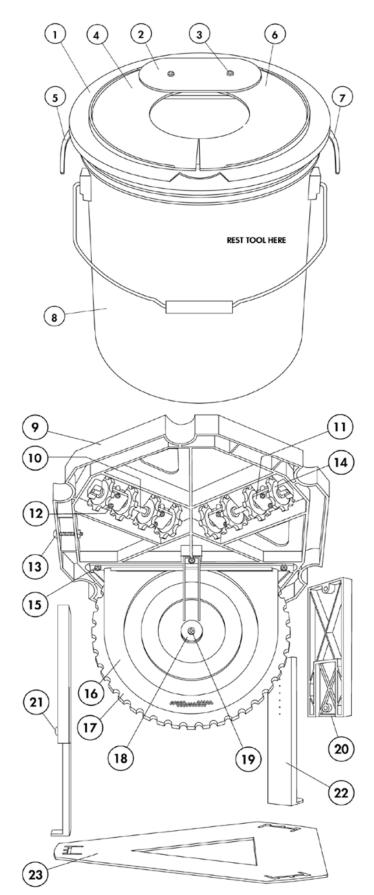

## Pad Washer Kit

| Mirka code | ltem | Description                   | Kit | Part No | QTY |
|------------|------|-------------------------------|-----|---------|-----|
| 9195001011 |      | Spare Part Kit for Pad Washer |     |         |     |
|            | 10   | Axle                          |     |         | 2   |
|            | 11   | Axle Retainer                 |     |         | 4   |
|            | 12   | Axle Retainer Screw           | х   |         | 8   |
|            | 14   | Cleaning Wheel                | ^   |         | 8   |
|            | 17   | Fluid Pump Wheel              |     |         | 1   |
|            | 18   | Pump Wheel Bearing Plate      |     |         | 1   |
|            | 19   | Pump Wheel Retaining Screw    |     |         | 1   |

## Pad Washer Spareparts

| Mirka code | ltem | Description                   | Kit | Part No | QTY |
|------------|------|-------------------------------|-----|---------|-----|
|            | 1    | Main Housing Cover Plate      |     |         |     |
|            | 2    | Cover Retainer Plate          |     |         | 1   |
|            | 3    | Cover Retainer Screw          |     |         | 2   |
|            | 4    | Cover - Left                  |     |         | 1   |
|            | 5    | Housing Clamp & Screw - Left  |     |         | 1   |
|            | 6    | Cover – Right                 |     |         | 1   |
|            | 7    | Housing Clamp & Screw – Right |     |         | 1   |
|            | 8    | Fluid Container Pail          |     |         | 1   |
|            | 9    | Pad Cleaning Plate            |     |         | 1   |
|            | 10   | Axle                          | Х   |         | 2   |
|            | 11   | Axle Retainer                 | Х   |         | 4   |
|            | 12   | Axle Retainer Screw           | Х   |         | 8   |
|            | 13   | Leg Attachment Screw & Nut    |     |         | 3   |
|            | 14   | Cleaning Wheel                | Х   |         | 8   |
|            | 15   | Pump Wheel Housing Screw      |     |         | 3   |
|            | 16   | Pump Wheel Housing            |     |         | 1   |
|            | 17   | Fluid Pump Wheel              | Х   |         | 1   |
|            | 18   | Pump Wheel Bearing Plate      | Х   |         | 1   |
|            | 19   | Pump Wheel Retaining Screw    | Х   |         | 1   |
|            | 20   | Leg – Upper                   |     |         | 3   |
|            | 21   | Leg Adjustment Screw          |     |         | 3   |
|            | 22   | Leg – Lower                   |     |         | 3   |
|            | 23   | Base Plate                    |     |         | 1   |
|            |      |                               |     |         |     |